

Model 124 with 4MATIC

Oil grades

ATF	Refer to MBNA Factory Approved Service Products list
-----	--


Capacity during fluid change

	Liters
All models	approx. 0.6

Torque specifications

	Nm
Oil filler and drain plug	50

Special tools

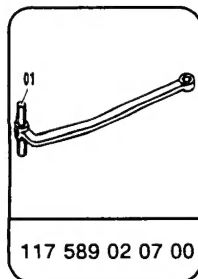

Commercial tools

14 mm hex. driver insert, 1/2" square drive	obtain locally
---	----------------

Note: When checking fluid level and changing fluid, the vehicle should be level.

Before fluid change, check transfer case for leaks

- Remove shielding plate under transfer case.
- Drain fluid with transfer case at operating temperature.
- Fill specified fluid quantity.
- Check fluid level. Fluid level should be up to filler hole.

